

A+OMATION

Atomate It!


Getting Started

User Guide 1.1: Atomate It! app for Android



Welcome to the Platform!

This manual guides you through the Atomate It! app.
The Atomate It! app activates and configures Atoms quickly and simply.

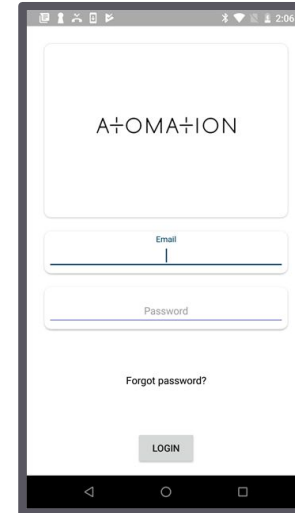

Requirements

- The Atomate It! app requires use of Atomations platform and Atoms (hardware) in order to operate.
- Requires Android 5.0 or later.
- Android device must be connected to Wifi or have a cellular data plan.

A grayscale photograph of an industrial machine, possibly a CNC lathe or mill, with a yellow rounded rectangle overlaid in the center. The machine has various components like a spindle, tool holder, and worktable. The text 'Getting Started' is written in white inside the rectangle.

Getting Started

Welcome Email

When you are added to the Atomation platform, you will receive an email to set up your credentials. Open the email on your mobile device.

If you do not receive this email, contact your representative.

Setting Up Credentials


Follow the link to create a password and finish setting up your account.

These credentials will be used for **BOTH** the Atomate It! app and the online dashboard.

Downloading The App

Download the Android app using the link in the email.

Make sure you do not have any previous versions of Atomate It! installed.

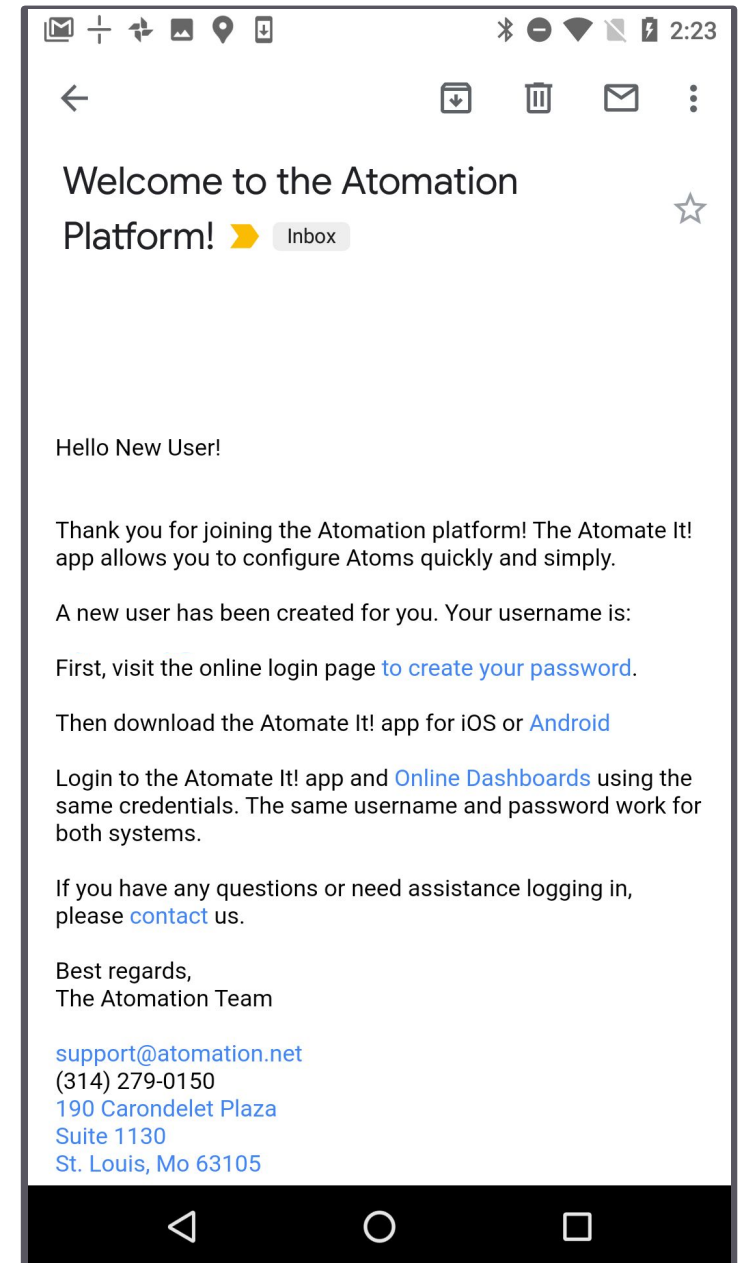


Helpful Hint

Make Sure you don't have any previous versions of Atomate It! installed on your device.

Depending on your Android device, a message may appear asking if you are sure you want to download the app. If you see this message tap **Install**.

The up-to-date version of the Atomate It! app is always available for download online. Go to Atomation.net, scroll to the bottom of the page and tap the Android button to start downloading.

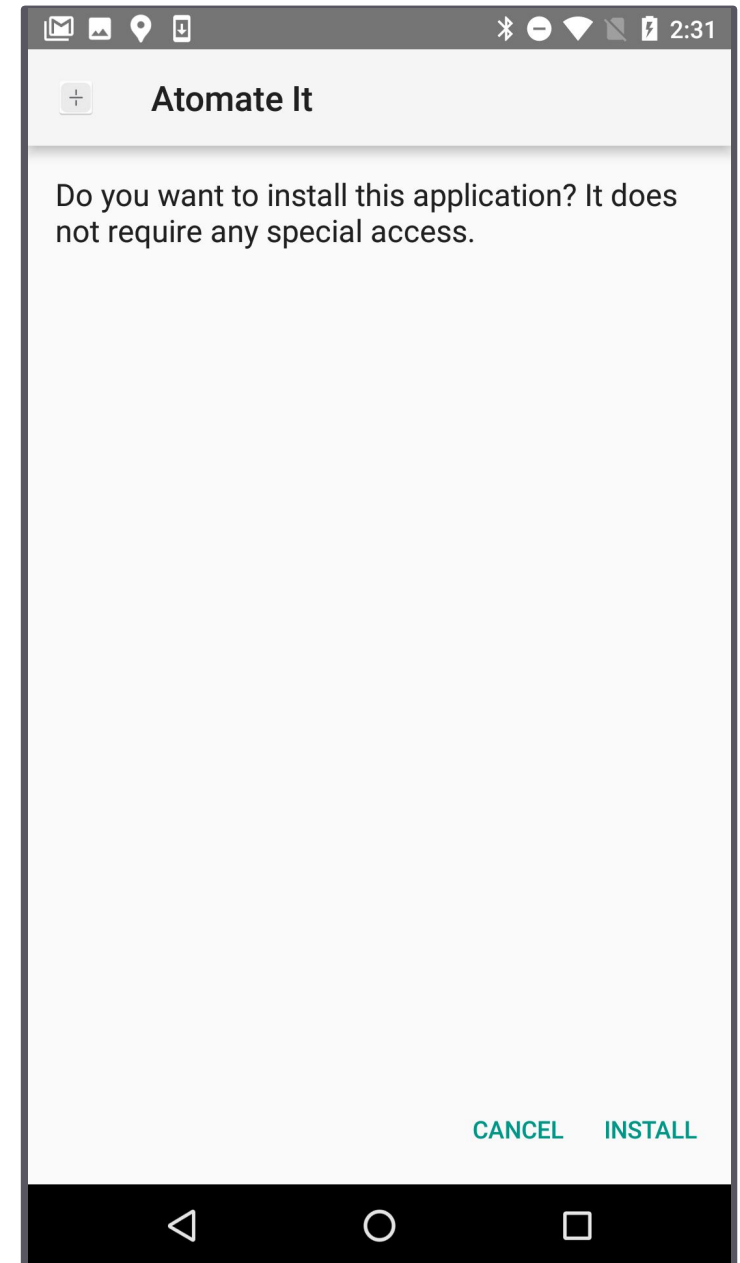


Login

Login using credentials provided by your representative and the password you created online.

Use the same credentials for **BOTH** the app and online dashboards.

If you need help accessing your credentials, use the Forgot Password option or contact your representative.

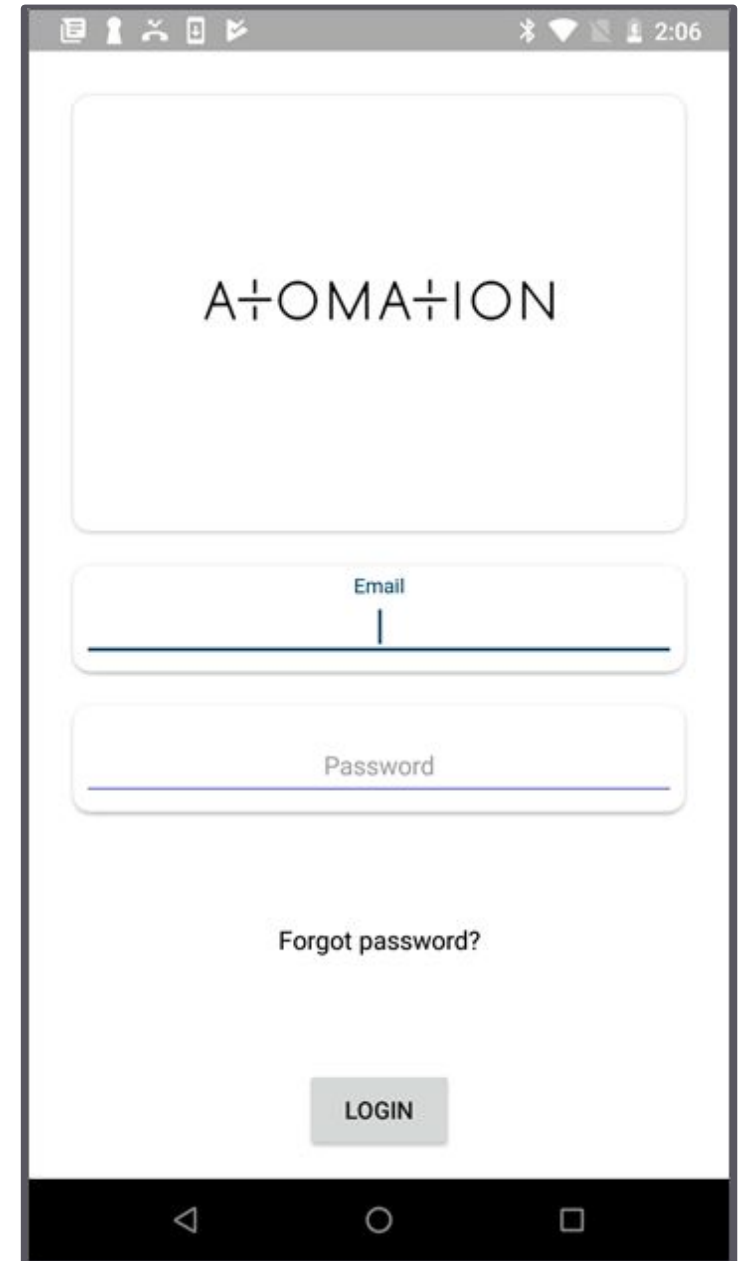


Allow Location

The first time you open the app a red bar with a message will state Location permission not granted.

Tap REQUEST.

You must select ALLOW for the Atomate It! app to access your location.

If you accidentally click deny, go to your Android's location settings, find Atomate It! and allow location.

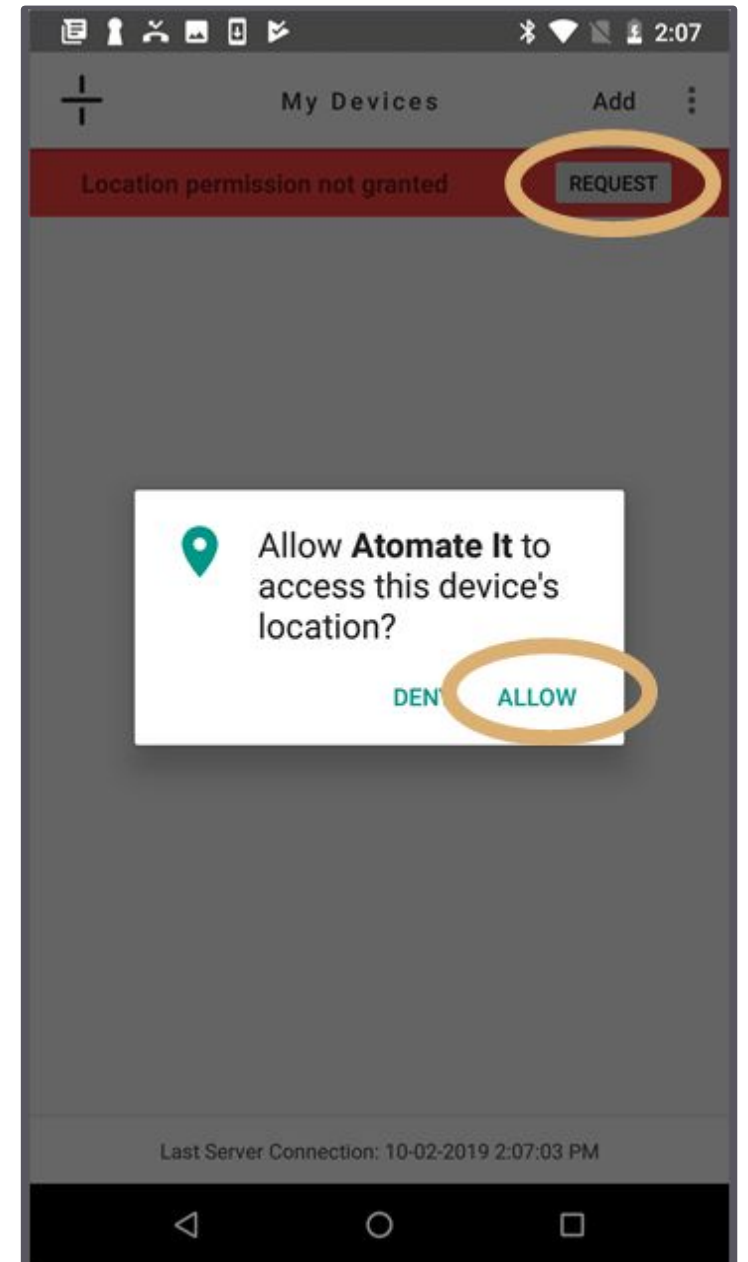

A grayscale photograph of an industrial robotic arm in a factory setting, serving as the background for the slide. The arm is positioned in the center-left, with various mechanical components and cables visible. The background is slightly blurred, emphasizing the machine.

Thank You

Learn how to Add your Atoms
In User Guide 1.2: Atomate It! app for Android