

ATOMATION.net

# Android Gateway Settings

A÷OMATION

Atomate It!


# Android Gateway Mode

*Gateway Mode is available only on Android devices.*

Gateway Mode allows Android devices to continuously communicate with Atoms to collect and send data to the cloud.

Make sure Atoms are in range of the Android device. Range is ~50M depending on Android device.

Atoms that are not in BLE range of the device will appear grey on the My Devices screen and data will not communicate with the gateway.

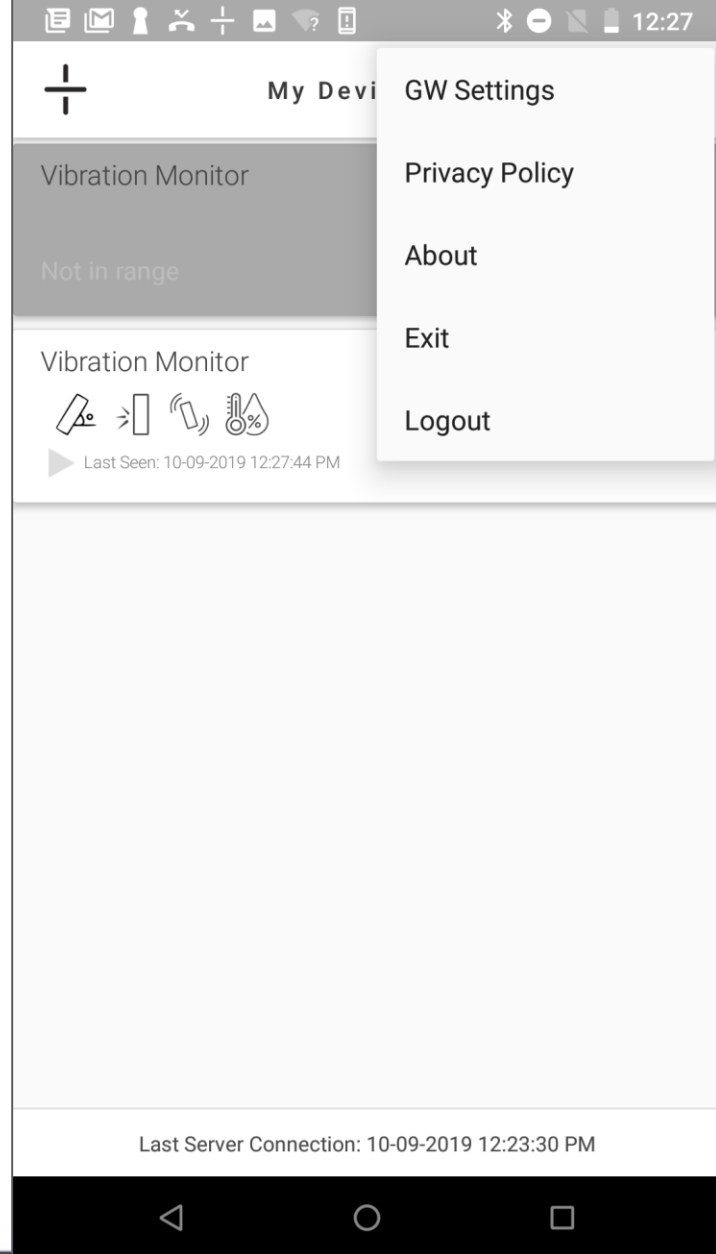


# Access GW Settings

Tap three dots at the top right of your screen.



Tap GW Setting to configure Gateway Settings.

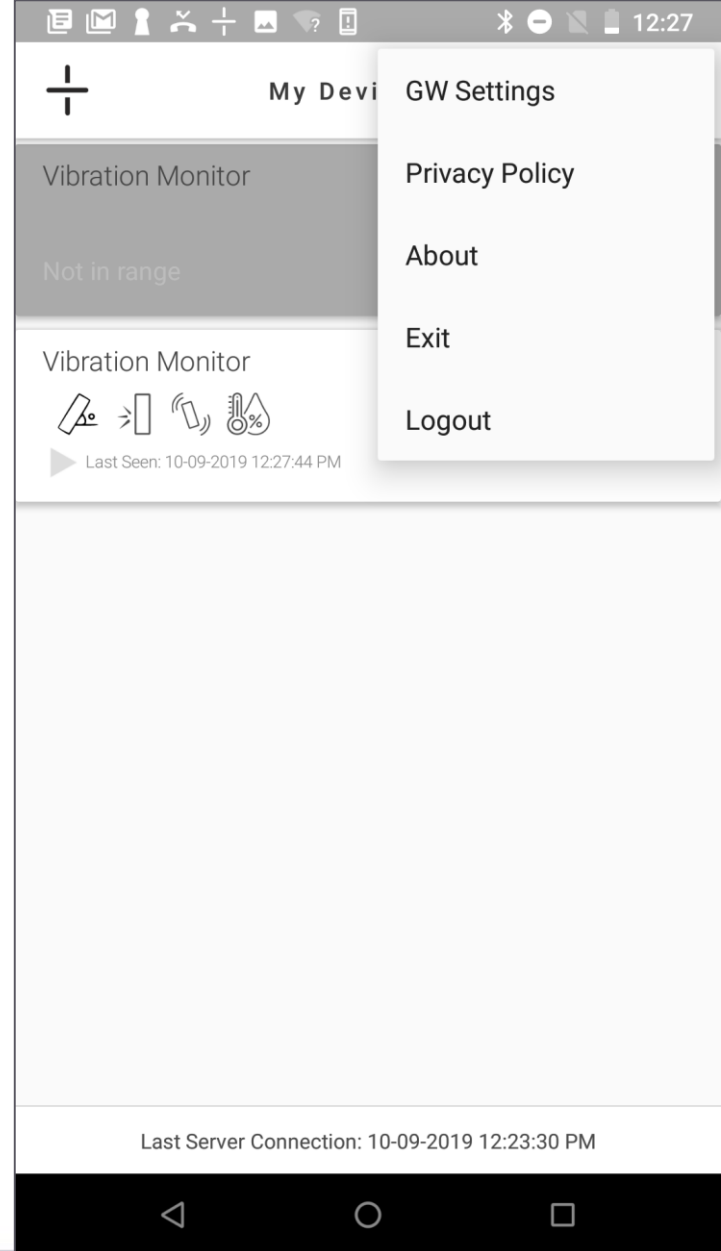

# Gateway Settings

First activate Gateway Mode, swipe the switch so it appears green.



Name your Gateway by clicking the box and typing a name that references the location or the Atoms the Gateway it is going to monitor.

Data Collection Interval allows you to determine how often the Android gateway communicates with Atoms uploading data to the cloud regardless of threshold events.

Site allows users to identify the site where the Gateway is located.

Keep Alive Interval allows Atomation to ensure the Android Gateway and Atoms are operational.

