

A÷OMATION

Atomate It!

Activating Atoms

User Guide 1.2: Atomate It! app for Android




Helpful Hint

You must have Bluetooth enabled on your mobile device!

Users must have internet connectivity.

You will not be able to utilize app functionality without these settings turned on.

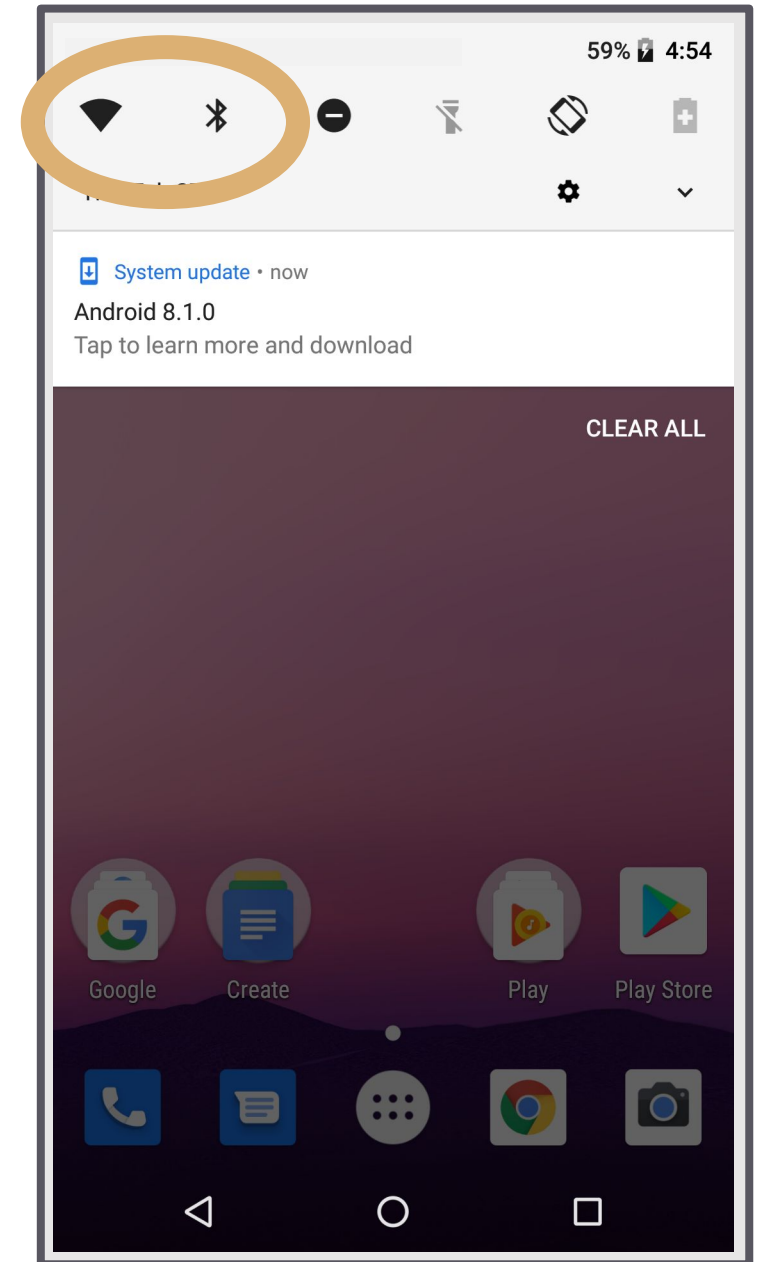



Adding Atoms



Helpful Hint

Do not surround yourself with Atoms. It is best to limit the number of Atoms in range to 25 while activating.


Add your Atom

After Login, the My Devices screen will state Please add devices.

Your Android device **must** have Bluetooth enabled and a cellular connection or be connected to WiFi in order to add an Atom. If you do not have an internet connection, the Add button will appear grey.

Tap Add at the top of the screen to look for available devices.

Locate the MAC ID label and make sure you are within range of an Atom to add it to the app.

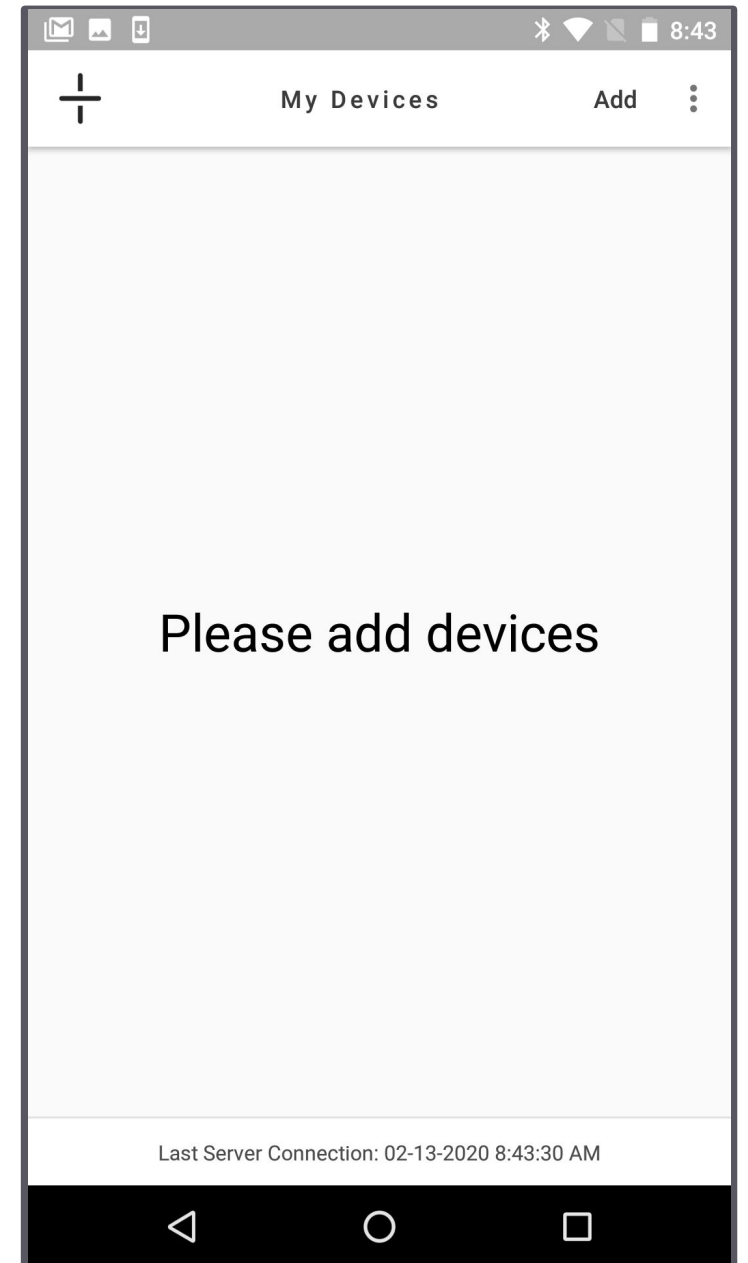

Select from Available Devices


After tapping the **Add** button on the My Devices screen, the Available Devices screen will appear.

The app will stay in Scanning mode while on the Available Devices screen.

On this screen, the app will continuously scan for Atoms and a list will populate with all Atoms in range. When Atoms are in Shelf Mode it can take a few minutes for the app to scan for the Atom signal.

Find the Atom that has the same last 4 numbers and letters that correspond with the last four digits of the MAC ID label on your Atom.


Tap the Atom on the screen to add it to your platform.

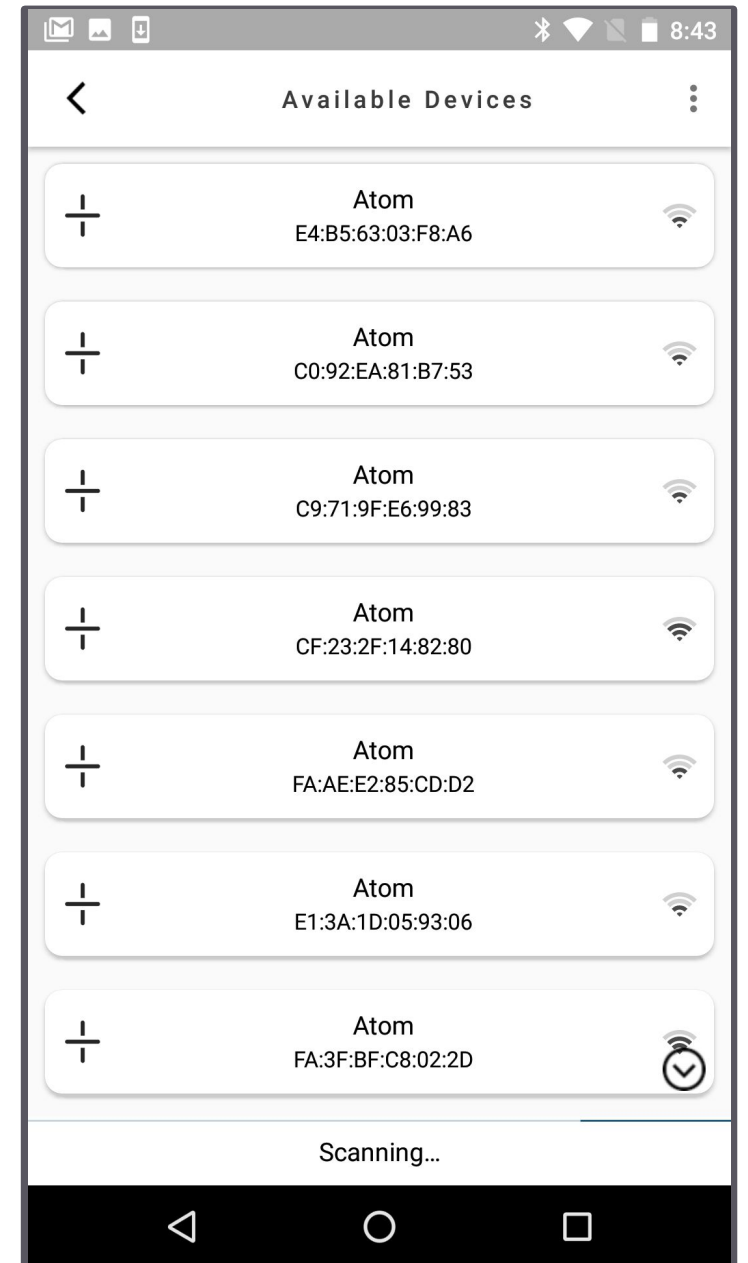

Helpful Hint

When first adding an Atom, if the app remains in scanning mode for over a minute without finding your Atom, swipe down on the Available Devices screen to refresh.

If you still do not see Atoms, tap the arrow to exit and tap Add to try adding again.

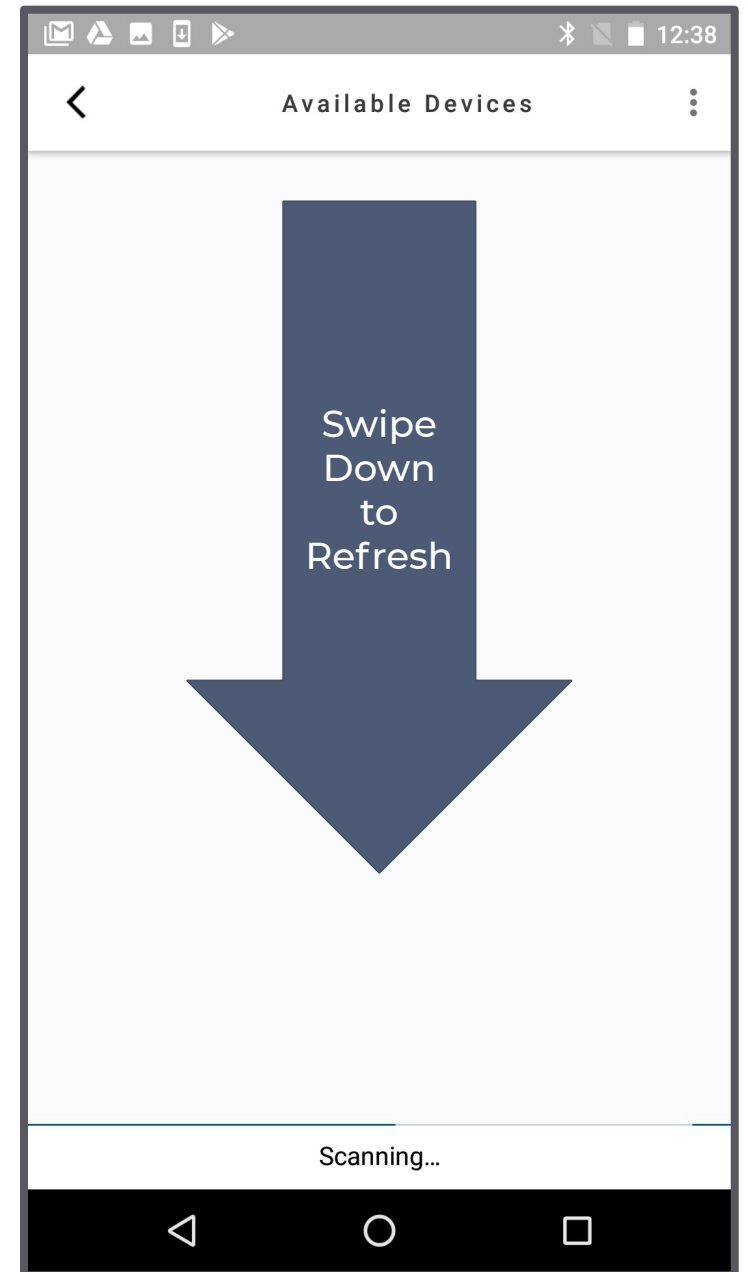



Activating Atoms

Activate your Atom


If your Atoms arrive in Shelf Mode, once an Atom is added a red **Device deactivated** message will appear.

Activate your Atom by tapping the power button.

Activation can take up to 1 minute.

More than one Atom can be activated at a time. You do not need to wait for each Atom to be activated before adding another.

When the red Device deactivated message disappears, your Atom is activated.

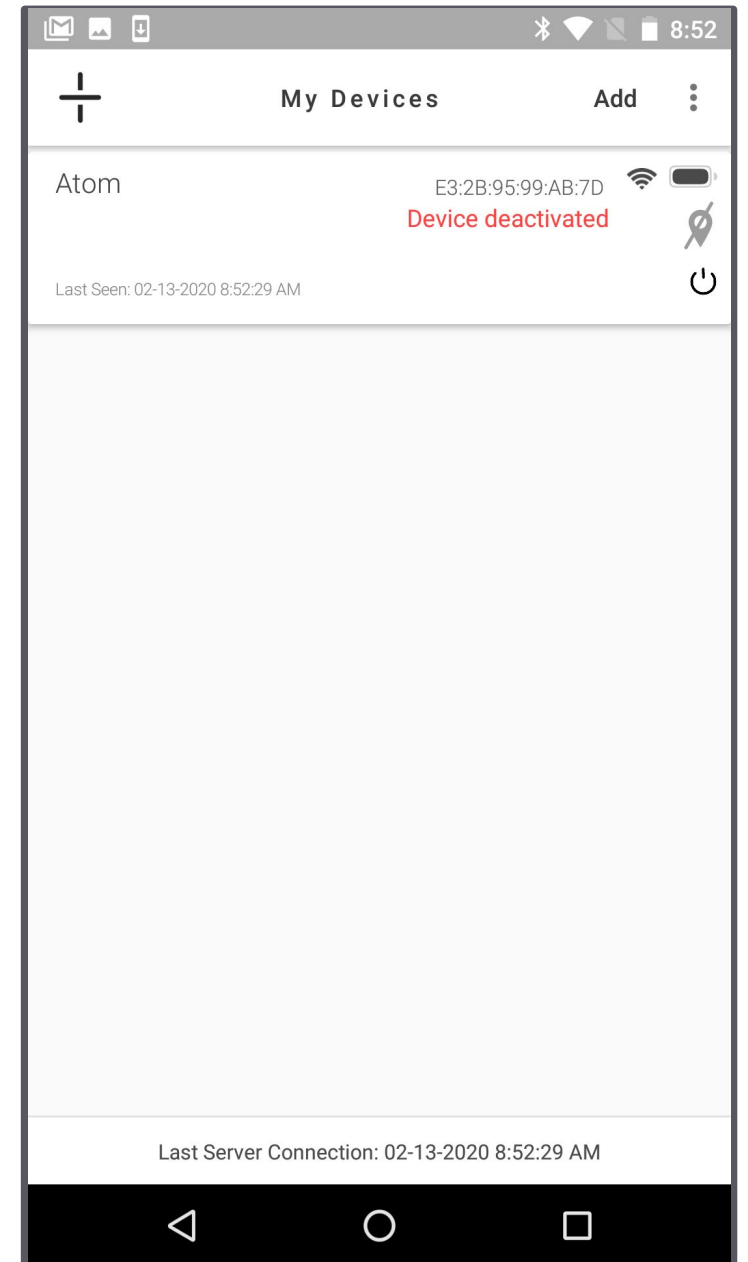


Take your First Reading

Use the Read button at any time to manually take a sample.

Take your first reading by tapping **Read** in the top right hand corner of the screen.

The No data available message will be replaced with a graph of your data points over the selected date range.

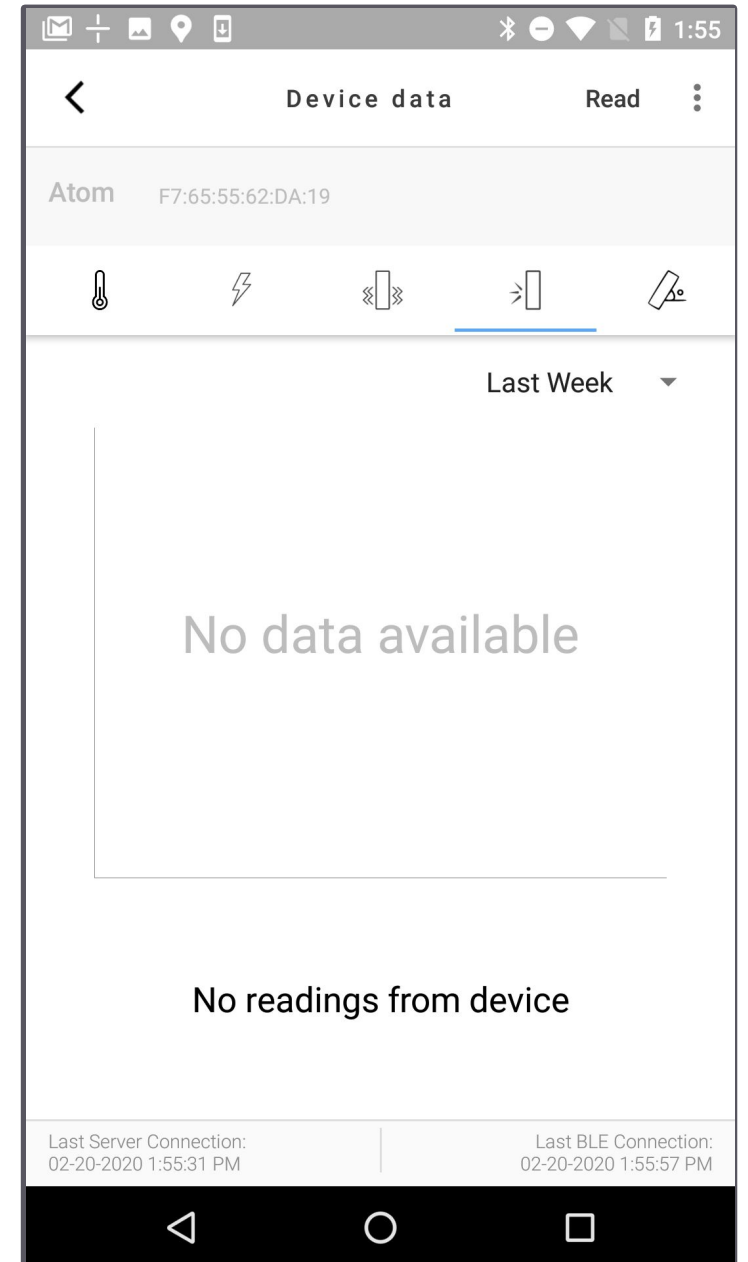

Thank You

Learn how to work with the Atomate It! App
In User Guide 1.3: Atomate It! app for Android